



mounting instruction
HD VRod Headlight mask (208926)



Installation time : 180 minute

Tools requirement 1) Scissor Bike lifter
2) Wire stripping pliers
3) 2,5-3-4-5-6-8 mm. Allen Wrench
4) Connector Crimp Tool
5) Loctite Medium strength

ATTENTION!


For disassemble and replacement oem parts
use the workshop manual.

1



To support the bike, lift it under the frame.
Remove the left side cover as picture.

2

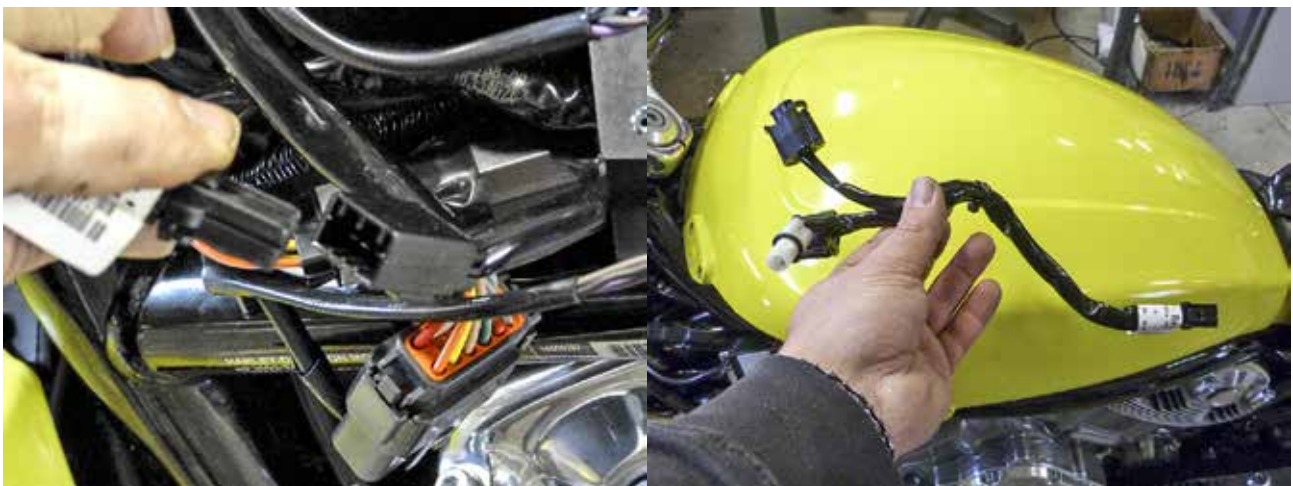

Disconnect and remove headlight and wiring as photo.

3



Remove top steering plate.



4

Check the technical design and make sure you have all the pieces
The technical design will be useful for the following steps.
Strips all four wire.



5


Crimping receptacle connector on the three 45 cm. wire.



6


Fasten two Red connector on white and orange wire.

7

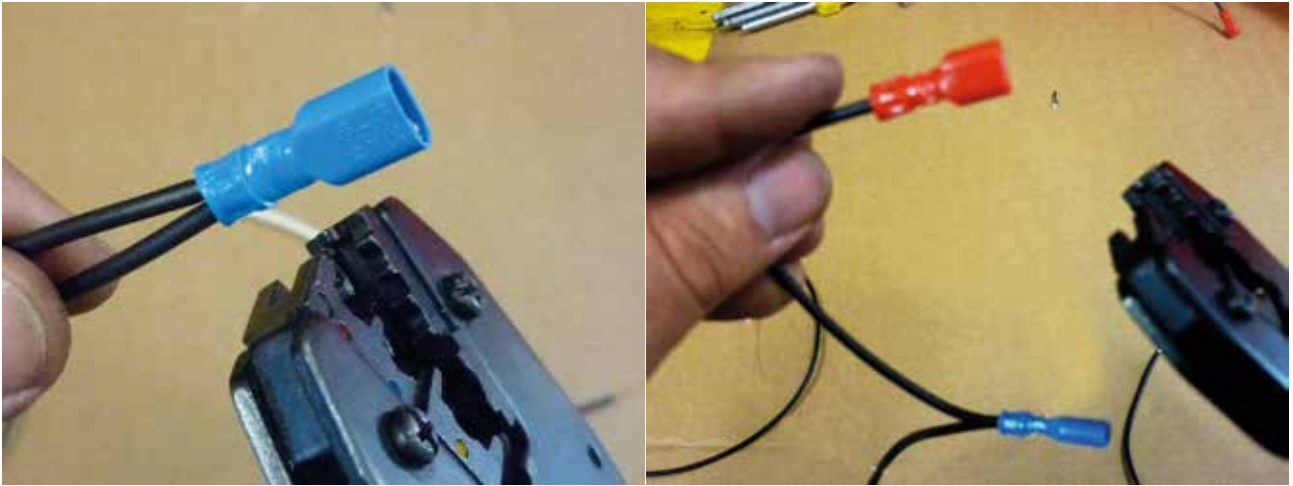


- 1) Link Long and short black wire on Blue Fast-on.
- 2) Connect remaining Red fast-on on last black wire.

8

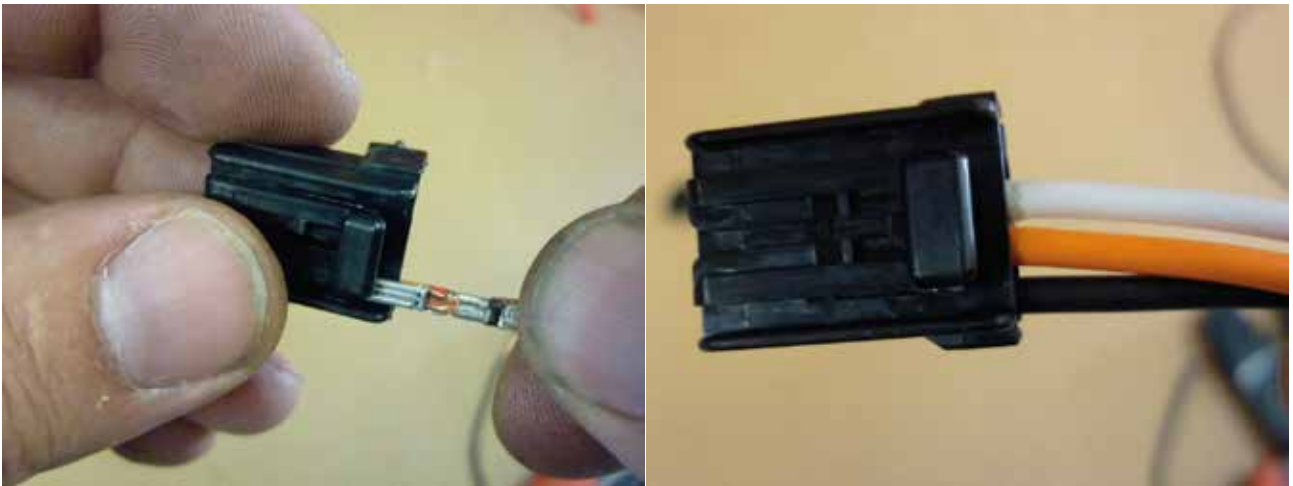


- Insert the receptable contact on black oem connector.
ATTENTION! at the sequence and position wire.

9

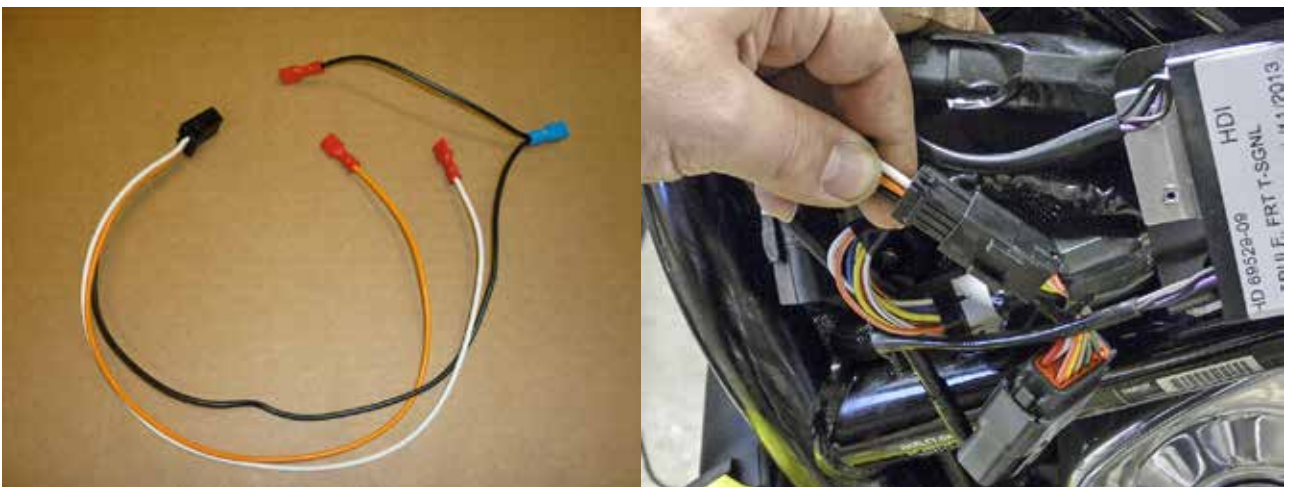

- Control the correct assembly and connect to OEM electrical system.

10

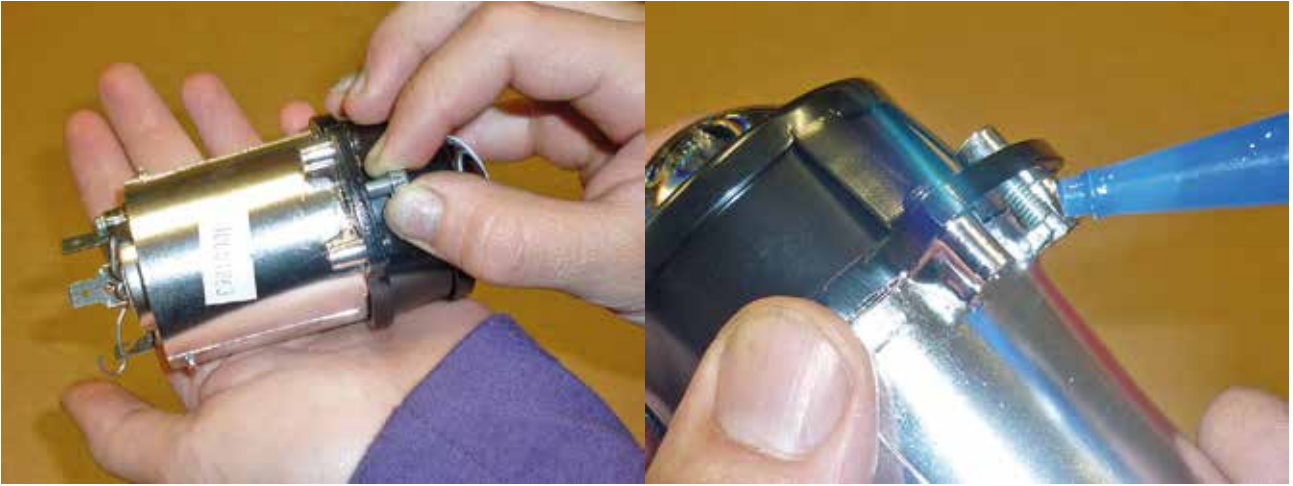

Insert bolts M4x10, as picture and apply Loctite medium thread locker.

11




1)Screw threaded rod m4x60 on headlights.
2)Insert bolts m4x25 on headlight bracket.(apply Loctite medium thread locker)

12




Fasten bracket on headlights.

13

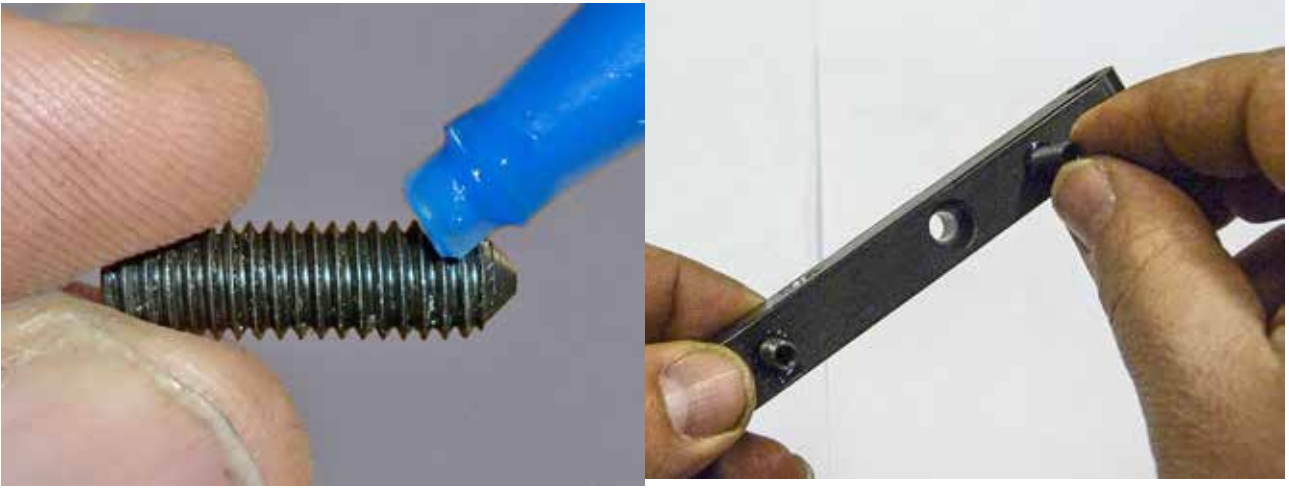

Apply thread lock on threaded pin and screw for half of their length on the support.

14

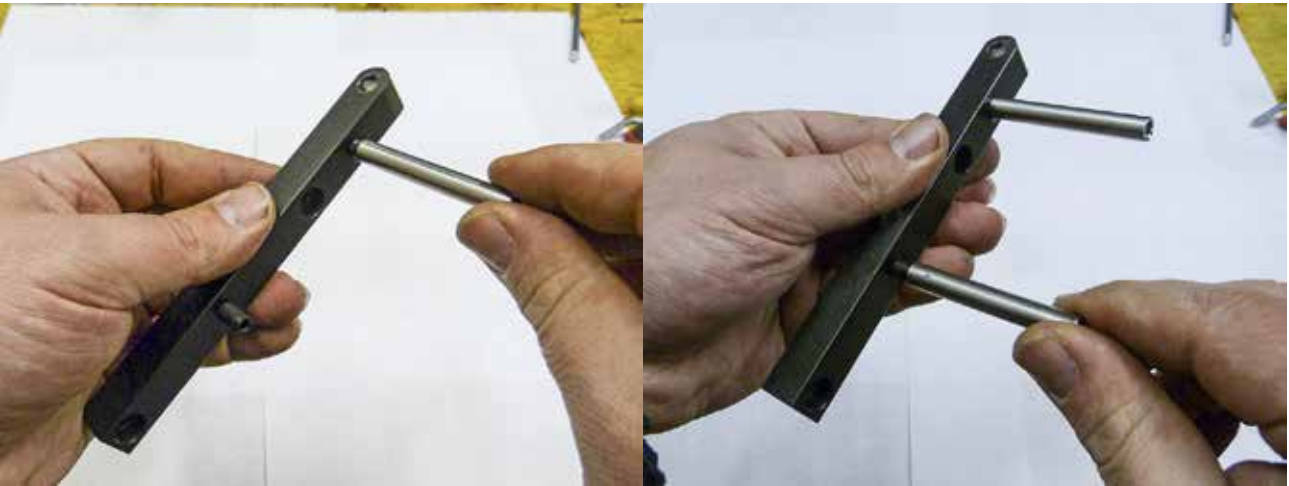

Apply thread lock on the grains and tighten two columns.

15



Insert two allen bolts M6x20 as picture.

16



Insert two allen bolts M6x40 as picture.

17



Insert the bracket SX marked, on left stem.
Insert last bracket on right stem as photos.

18




Now you can refit top plate.

19



Secure the support prepared earlier on two brackets.

20

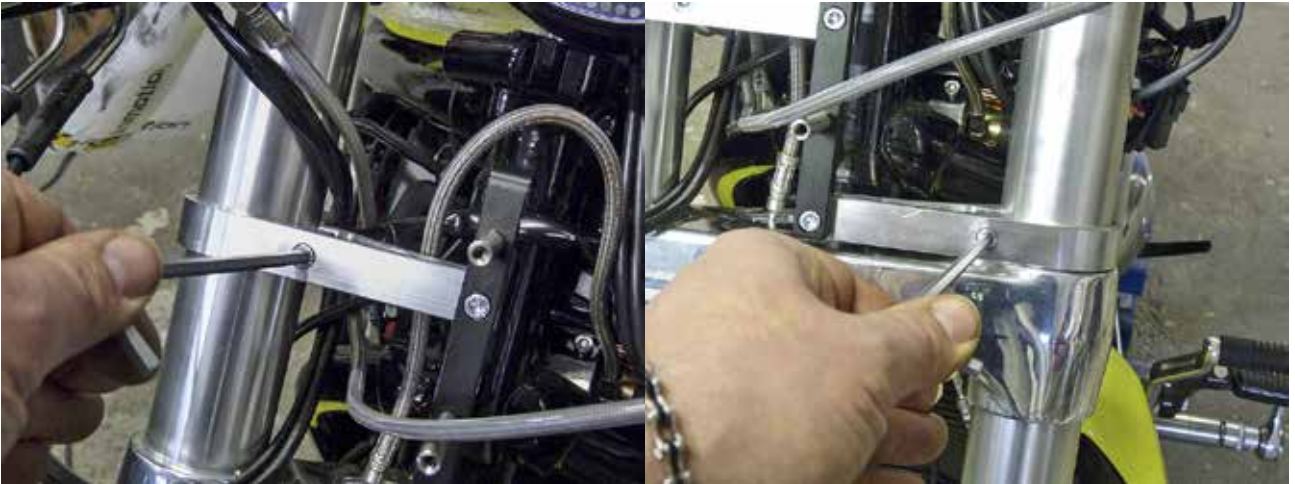

Fasten brackets.

21



Insert two allen bolts M8x35 with washer as photos.

22



Plug wire orange(positive) & Black(negative) on the low beam headlight. Use bolt m8x35 to fasten headlight as show on the picture.

23



Plug wire white(positive) & Black(negative) on the high beam headlight. Use bolt m8x35 and schnoor washer to fasten headlight.


24



Use botton bolt m6x14 and schnoor washer to fasten headlight mask. Replace all removed parts to complete the installation.

V-Rod Front Light & Numberboard

code 208926

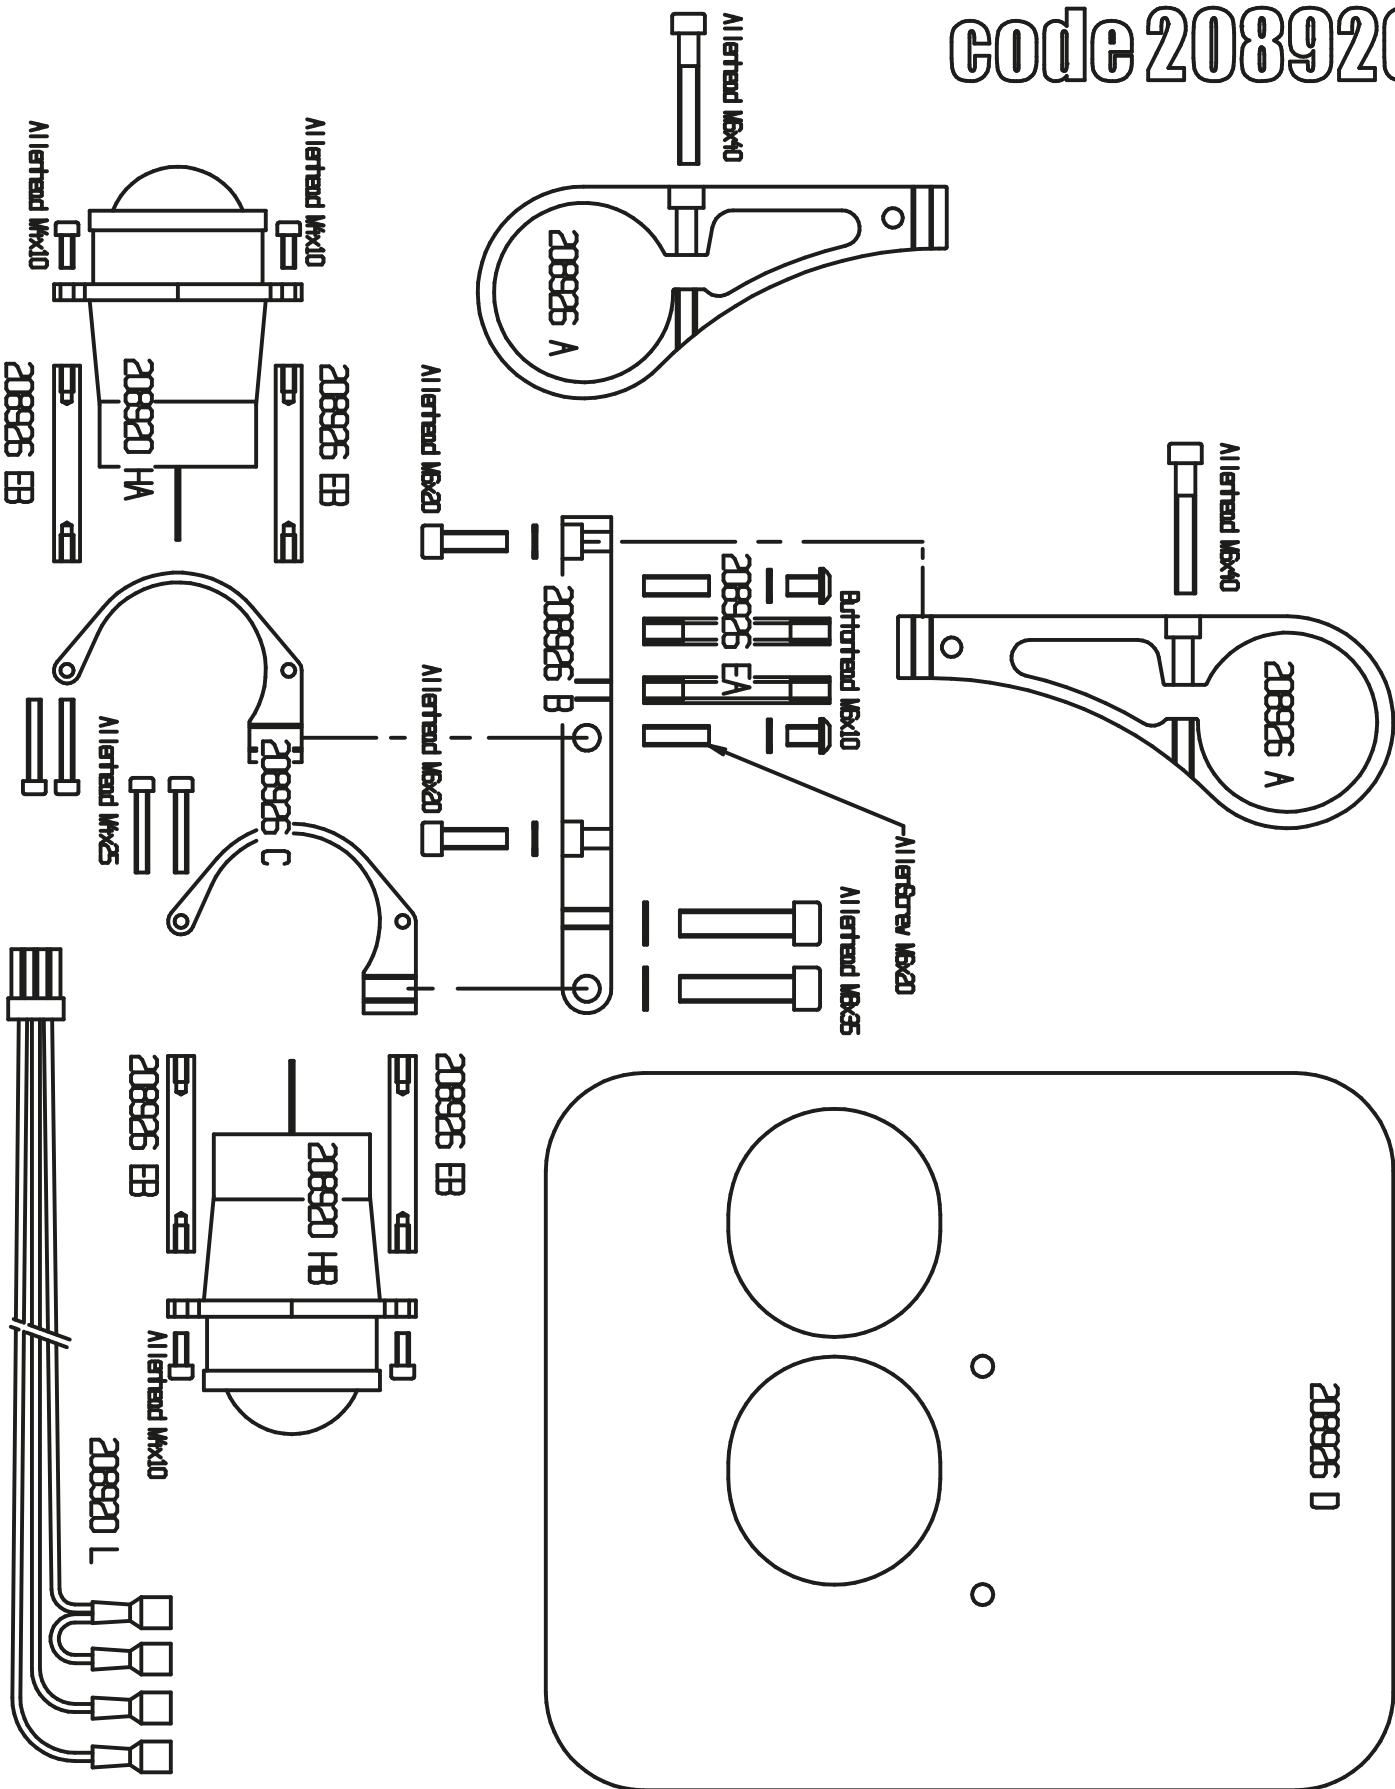



Restituzioni & Difetti

Eventuali reclami devono essere fatti entro 7 giorni dalla data di consegna con preavviso.

Le restituzioni devono essere espressamente autorizzate dalla FreeSpirits per iscritto.

Le restituzioni senza autorizzazione non verranno accettate.

Una tassa del 20% verrà trattenuta per il ristoccaggio del materiale.

La tassa del 20% non verrà trattenuta se la restituzione è dovuta ad un difetto della merce o ad un errore da parte nostra.

Non si accetta il ritorno di merce manomessa.

Tutte le restituzioni devono essere spedite con trasporto prepagato e accuratamente imballate.

Non verranno assolutamente accettate le restituzioni a nostro carico.

FreeSpirits srl rilascerà un credito per la restituzione della merce del valore del prezzo di acquisto da utilizzarsi su ordini futuri.

Reclami

Prima della spedizione le nostre merci vengono attentamente controllate e accuratamente imballate. Tutti i reclami per danno o smarrimento durante il trasporto devono essere direttamente inoltrati dal cliente al corriere che ha effettuato il trasporto. Di conseguenza è importante opporre immediatamente riserva sul documento di trasporto relativo, onde ricevere eventuali risarcimenti.

FreeSpirits srl non è responsabile dei danni incorsi durante il trasporto.

Garanzia

La nostra garanzia è limitata alla riparazione o alla sostituzione di parti difettate solo entro 7 gg. dalla data di acquisto. La garanzia non copre i danni per installazione impropria, negligenza, alterazione o cattivo uso. Non si accetta alcun prodotto danneggiato o modificato a causa di impropria installazione.

Attenzione

La ditta FreeSpirits srl non ha nessuna connessione con i marchi Harley Davidson e Buell, e sono usati solo esclusivamente come riferimenti.

Considerando che alcuni accessori di questo catalogo potrebbero non essere conformi al codice stradale italiano ed estero, si consiglia prima della vendita o installazione, di consultare il, codice stradale stesso. FreeSpirits srl responsabilizza inoltre i rivenditori nell'informare l'acquirente prima di vendere o procedere all'installazione degli articoli.

La ditta FreeSpirits srl declina ogni responsabilità nell'uso improprio dei suoi accessori

