





OEM Handlebar Mirror Anchors

code 302308



Flathead
M6x20




302308 AC

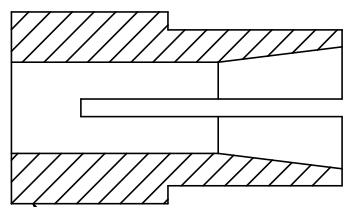

302308 AA

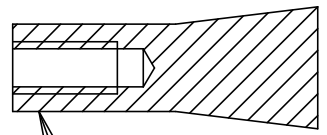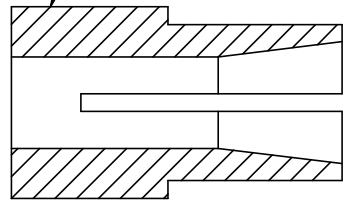

302308 AB

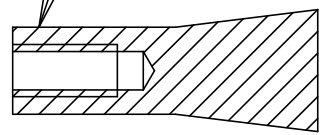

Flathead
M6x20

