


# Scrambler-Bonnie Foot Pegs


code 306200

front mount


306200 A

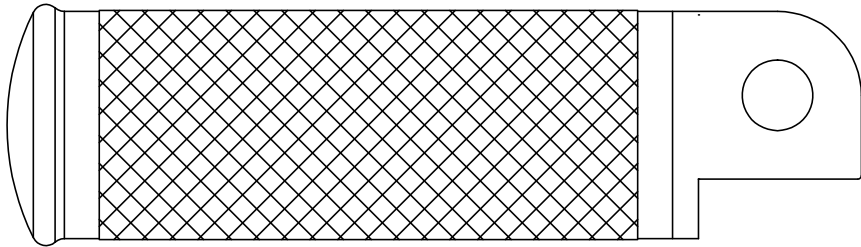

306200 A

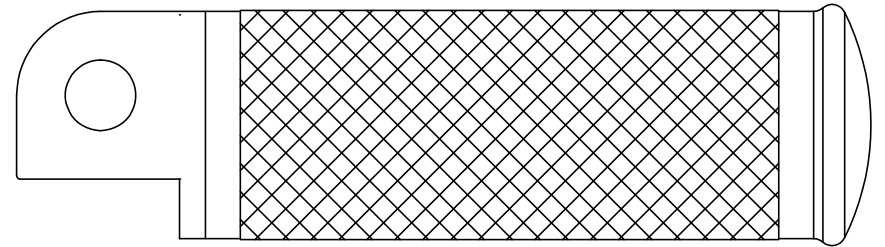

Buttonhead M10x40

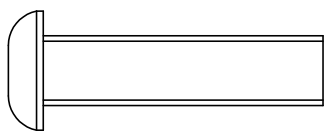

rear mount



Buttonhead M10x40

