



mounting instruction

(Cod. 308532)

Single arm protection for TRIUMPH




Installation Time : 5 minute

Tools Requirement : 1) Allen Wrench 8 mm



Tel. 0039 (0) 445-390437
Fax 0039 (0) 445-395539

Email info@freespirits.it
Site: www.freespirits.it

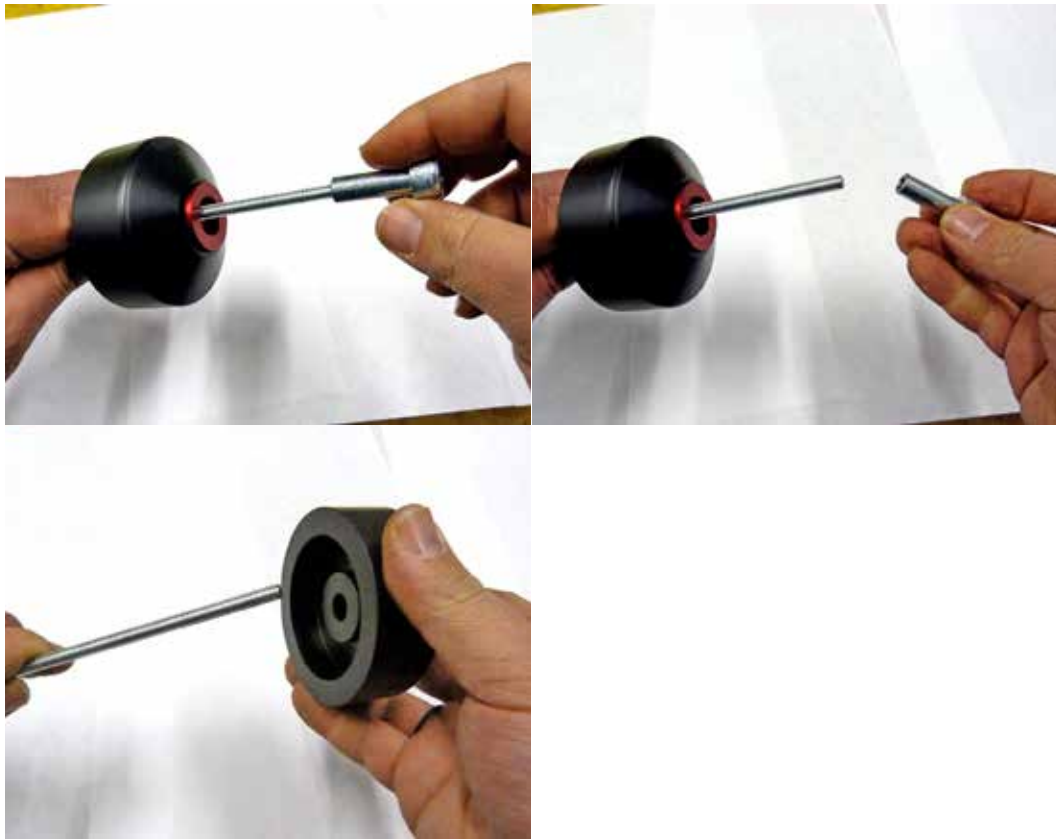

1

Unscrew bolt and remove protection plug left.




2

Enter protection plug right and the threaded rod as in the photo.



3

Now insert and tighten the protection plug left.
IMPORTANT: help you with your other hand on the opposite side, for center the threaded rod.

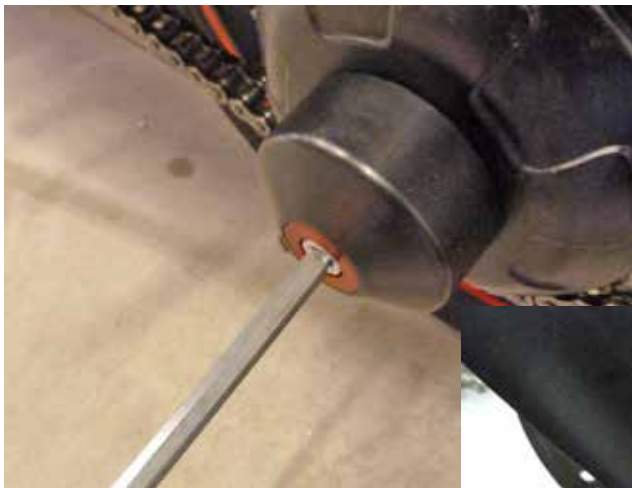

4

Fasten the bolt left
IMPORTANT: if you can help yourself with a twin wrench on the right bolt.

Tampone Mono posteriore

code 308532

